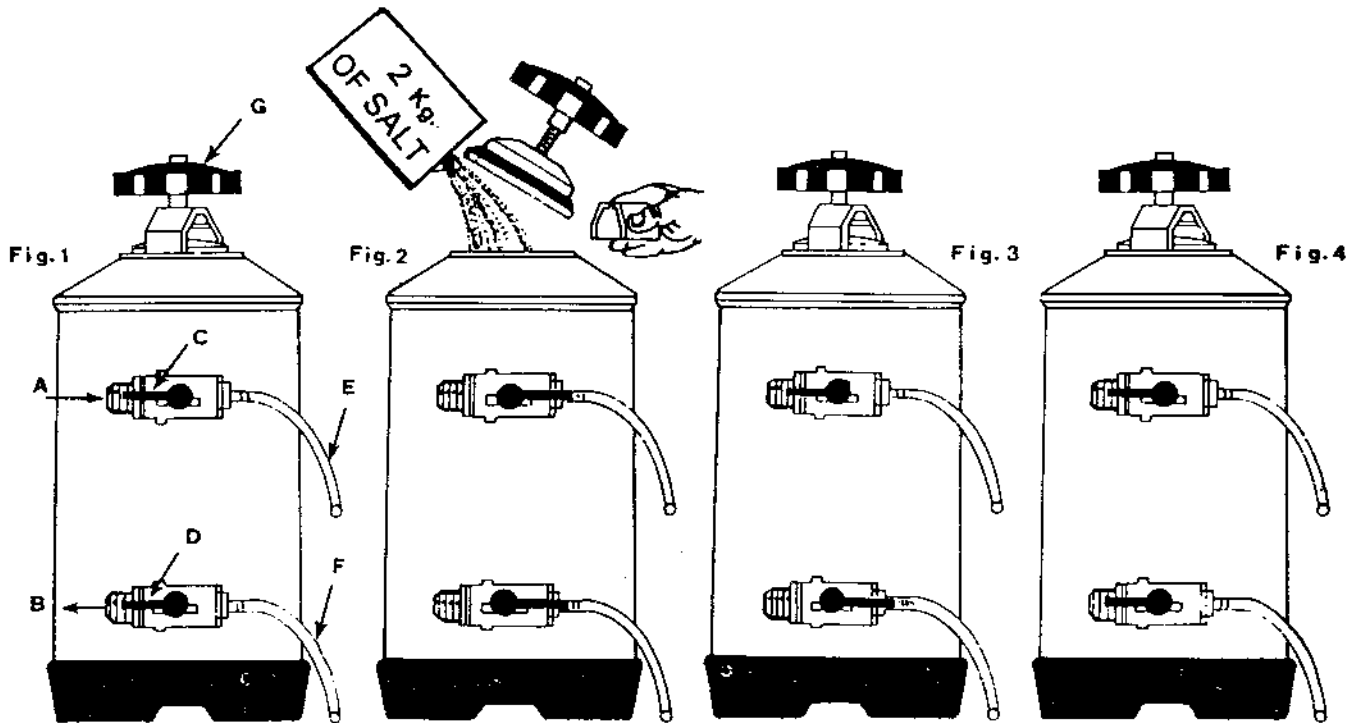


# MANUAL WATER SOFTENER REGENERATION INSTRUCTIONS.

★ *MUST BE CARRIED OUT WEEKLY OR EVEN MORE OFTEN* ★  
*IN CONDITIONS OF EXTREMELY HARD WATER  
OR HARD USE OF MACHINE.*



**FIG 1** \_\_\_\_\_ **SOFTENER IN NORMAL USE.**

**FIG 2** \_\_\_\_\_ **PLACE TUBE (E) IN A BUCKET AND TUBE (F) IN SINK OR DRAIN  
TURN VALVES (C) & (D) TO RIGHT APPROX 2 PINTS OF WATER  
WILL BE EXPELLED UNDER PRESSURE  
SLACKEN NUT (G) REMOVE BRIDGE AND TOP COVER TAKING  
CARE NOT TO DROP INSIDE CANISTER  
ADD 1KG (APPROX 2 PINT MEASURES) OF GRANULAR SALT  
TO CANISTER AND REPLACE TOP COVER.**

**DO NOT OVERTIGHTEN**

**FIG 3** \_\_\_\_\_ **TURN VALVE (C) TO LEFT, WATER WILL RUN INTO SOFTENER  
AND FLUSH SALTY SOLUTION FROM TUBE (F) INTO DRAIN**

**FIG 4** \_\_\_\_\_ **AFTER 30 MINUTES APPROX, TASTE WATER FROM SOFTENER  
TO ENSURE IT IS NO LONGER SALTY.  
IF SALTY TASTE REMAINS, ALLOW WATER TO CONTINUE  
RUNNING, AND TASTE AGAIN.  
WHEN WATER IS FREE OF SALT TURN VALVE (D) TO LEFT**

**REGENERATION IS NOW COMPLETE**

**NOTE: NEVER ATTEMPT TO CLEAN OUT  
THE INSIDE OF THE WATER SOFTENER.**